

Core Acceptance Criteria Manual and Power Steering Racks

Core returned on an exchange basis should be of the same application type as that ordered. Assemblies of equipment of different marks, which can be fitted in the same way on the vehicle and which are interchangeable can be returned.

The inspection of returned core will be carried out only visually
Imitation units should not be credited

Units, which are mechanically damaged or in such a condition that they cannot be reconditioned, will not be accepted. For example –

- Heavy Corrosion,
- Dismantled,
- Incomplete major parts missing, (e.g. power pipes, arms, tie rods etc)
- Seized or rusted internal components
- Broken brackets.
- Accident Damage, resulting in cracks to external Casing/Casting
- Damage to Port Holes/Pressure points
- Damaged Splines/Threads
- Scrap-Yard Burn-offs

